

TOURATECH

TOURING RALLYE RACING TECHNOLOGY



Juli 2004

01-040-0664-0

01-040-0665-0

Anbauadapter für GPS auf Lenkerklemmung R1200GS

Lieferumfang:

- 4 x Spezial Schrauben
- 2 x Haltewinkel
- 1 x Querrohr
- 2 x Schraube Liko M6x12
- 4 x Schraube 6-Kant M5x10
- 2 x U-Scheibe M6
- 4 x U-Scheibe M5
- Kabelbinder

Montage:

Lösen Sie die Schrauben der Lenkerklemmung und ersetzen Sie diese durch die vier Spezialschrauben. Gewinde der Schrauben unbedingt einfetten.


Lenkerklemmung wieder anziehen.

Jetzt die beiden Haltewinkel je nach Wunsch mit der Bohrung nach vorne oder hinten auf die Spezialschrauben setzen und mit den M5x10 Sechskantschrauben anschrauben. Querrohr einsetzen und mit den M6 x 12 Liko zwischen den Winkeln anschrauben. Jetzt alle Schrauben anziehen.

Gaszug mit Kabelbinder am rechten Haltewinkel befestigen. (Sonst scheuert der Gaszug durch. Jetzt GPS-Halter an Anbauadapter anschrauben.



Sehen Sie auch in unserem Katalog oder im Internet unter WWW.TOURATECH.DE.

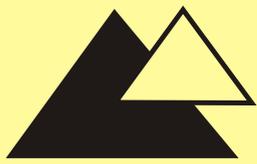

TOURATECH

TOURING RALLYE RACING TECHNOLOGY



01-040-0664-0

01-040-0665-0

Installation Instructions GPS Mount Adapter R1200GS

Contains:

- 4 x Special Screws
- 2 x Triangular bar holding bracket
- 1 x 4 inch round bar
- 2 x Screw dome head M6x12
- 4 x Screw hex M5x10
- 2 x Washer M6
- 4 x Washer M5
- Cable ties

Installation:

Loosen the handlebar clamp screws and replace them with the supplied Touratech special screws. It is recommended to screw the bolts in all the way by hand (with upper clamp portion removed). Also recommended to use anti-seize on threads. Anti-seize is a messy gray thread lubricant, you will know if it is there. Sometimes the BMW shop has already used anti-seize.

Tighten the handlebar clamps and install the triangular bar holding brackets with the M5x10 hex screws and washers M5.

You can choose to install the brackets so that the bar will either be front or back.

Install the bar with the M6x12 screws and washers to the triangular bar brackets. Zip ties can be used if the throttle cable rubs against the right bracket. Now you can install Touratech GPS mount on the bar.

