

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

November 2002

01-040-1350-0

Anleitung Spoiler für Windschild 1150GS Adventure

Lieferumfang:

- 1 x Spoiler für Windschild kpl.
- 2 x Kantenschutz klar

Montage:



Zur Montage des Spoilers einfach den Spoiler mit den beiden Führungen von oben mittig auf das Windschild schieben. Dazu ist etwas Kraft nötig, damit der Spoiler später fest sitzt.


Darauf achten, dass der Kantenschutz in den Führungen sitzt, sonst laufen Sie Gefahr die Scheibe zu verkratzen

Den Haken des Spanbandes zwischen Armaturen und der oberen Abdeckung einschieben und leicht verspannen.

WWW.TOURATECH.DE

Achtung! Ohne TÜV Gutachten! Wir empfehlen den Spoiler bei TÜV Vorführungen zu entfernen.

Diese Anleitung ist nach unserem derzeitigen Kenntnisstand verfaßt. Rechtliche Ansprüche auf Richtigkeit bestehen nicht. Technische Änderungen vorbehalten.

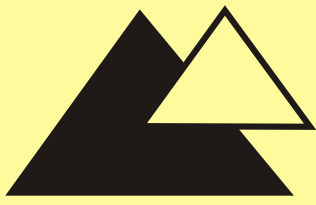

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

August 2003


01-040-1350-0

Windscreen Spoiler for R1150GS Adventure

Parts Included:

1 x Spoiler for Windscreen R1150GS ADV

Assembly:

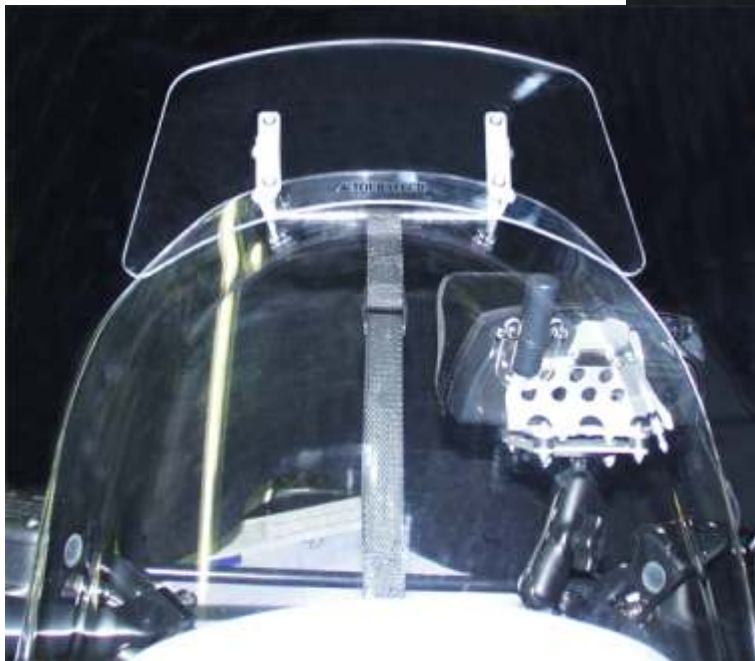

Push the spoiler with the two guide slots into position at the center of the windscreen. You may need to apply some force to the spoiler so that it seats firmly in place at the top of the screen. Take care that the slots bottom out otherwise you run the risk of scratching the screen. The hook of the strap grabs underneath the plastic shroud between the screen and the instrument panel.