

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

Mai 2002

01-040-157X-0

Anleitung Spoiler groß für Handprotektor

Lieferumfang:


- 1 x Spoiler groß f. Handprotektor (Satz)
- 4 x Schraube Linsenkopf Kreuzschlitz M4x12
- 4 x Mutter selbstsichernd M4
- 4 x U-Scheibe groß M4
- 4 x U-Scheibe M4
- 4 x Abstandsrolle 7,4,4



Montage:

Die Spoiler werden einfach der Abbildungen entsprechend mit der Lasche am Handprotektor eingefädelt und anschließend verschraubt. Stecken Sie dazu bitte pro Spoiler insgesamt zwei Schrauben Linsenkopf Kreuzschlitz M4x12 mit je einer U-Scheibe M4 von vorne / außen durch den Spoiler. Setzen Sie dann von innen / hinten je eine Abstandsrolle und eine U-Scheibe groß M4 dagegen und verschrauben die Anordnung mit je einer Mutter selbstsichernd M4.



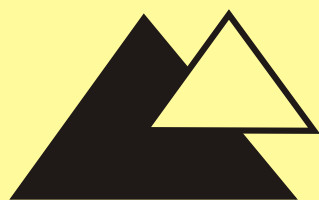

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

Mai 2002

01-040-157X-0

Installation Instructions Large Spoilers for Hand Guards

Contains:

- 1 x Spoilers for hand protectors (pair)
- 4 x Screw dome head Phillips M4x12
- 4 x Nylock nut M4
- 4 x Washer large M4
- 4 x Washer M4
- 4 x Spacers 7,4,4



Installation:

The spoilers are attached on the hand guards as shown on photos. Insert the tab in the middle of the lower edge of the spoiler into the hole on the hand guard.

Set two screws dome head Phillips M4x12 per spoiler with washer M4 under the screw head from the front or outside. Set then the spacers from the back or inside and large washer M4 and tighten with nylock nuts.

