

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

Oktober 2002

01-040-1701-0

Anleitung

**Spoiler für original Handprotektor
R1150 GS / Adventure / 1200 GS / Adventure**

Lieferumfang:

- 2 x Spoiler
- 4 x Linsenkopfschraube M4x14
- 4 x U-Scheibe für M4
- 4 x Mutter selbstsichernd M4

Montage


Demontieren Sie Ihre originalen Handprotektoren.

Legen Sie die Spoiler innen in den Protektor und zeichnen Sie die im Spoiler vorgegebenen Bohrungen auf den Handprotektoren an.


Bohren Sie jetzt an den angezeigten Stellen jeweils ein 5mm Loch (Bild 1).

Verschrauben Sie jetzt die Spoiler mit den mitgelieferten M4x14 Linsenkopfschrauben, U-Scheiben und Muttern am Handschützer.

Anschließend Handprotektor wieder montieren.

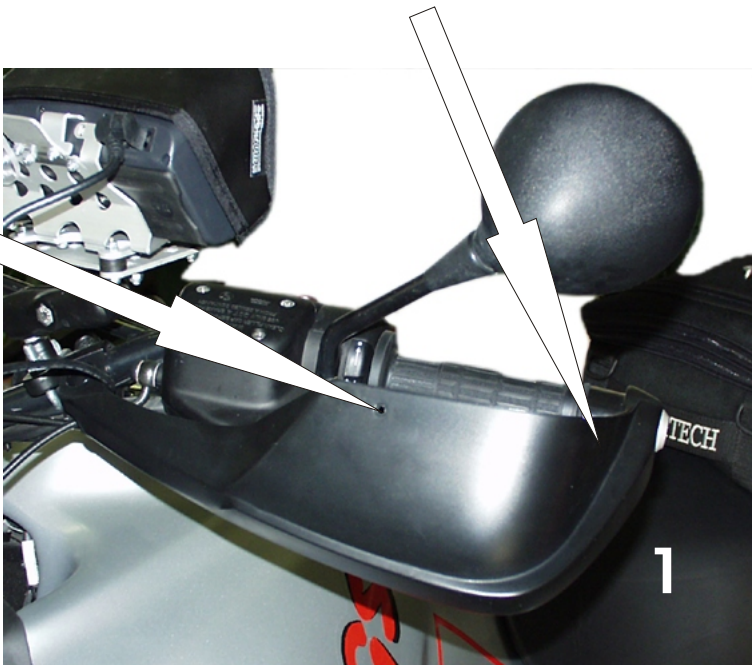

Sehen Sie auch unsere Lenkerhalterungen in unserem Katalog oder im Internet unter WWW.TOURATECH.DE.

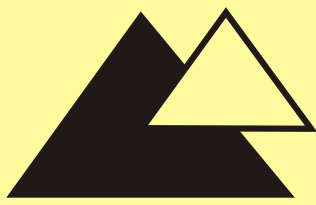

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

01-040-1701-0

Installation Instructions Spoilers For Original Hand Guards BMW R1150 GS / Adventure / 1200 GS / Adventure


contains:

- 2 x Spoiler
- 4 x Screw dome head M4x14
- 4 x Washer M4
- 4 x Nylock nut M4

Installation

Remove original hand guards and set the spoilers on the inside of them.

Mark bore holes on the hand guards with the help of the spoilers and drill 5mm holes (photo 1).

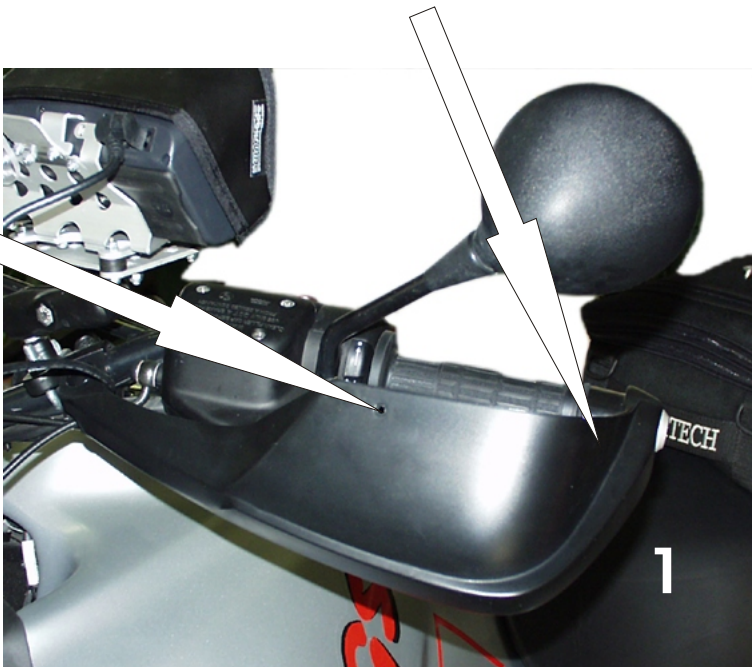

Attach the spoilers with supplied M4x14 dome head screws, washers and nylock nuts on the hand guards (photo 2).

Reinstall the hand guards on the handlebars.

