



# TOURATECH

TOURING RALLYE RACING TECHNOLOGY

März 2004

01-370-0170-0

## Anleitung Aufbockgriff Hand-bar KTM LC8

### Lieferumfang:

- 1 x Aufbockgriff Hand-bar
- 2 x Schraube Sennkopf M8x30
- 4 x U-Scheibe M8



### Montage


Demontieren Sie bitte den Soziasfußrastenausleger auf der linken Fahrzeugseite.

Dieser wird jetzt zusammen mit dem Aufbockgriff Hand-bar und den beiden beiliegenden Schrauben Senkkopf M8x30 wieder montiert.

Zwischen Griff und Rahmen die Vier U-Scheiben legen, da sonst der Griff den Ausgleichsbehälter des Federbeins berühren kann.

Der Aufbockgriff Hand-bar wird dabei (von außen gesehen) unter dem Soziasfußrastenausleger montiert.

Sehen Sie auch in unserem Katalog oder im Internet unter [www.touratech.de](http://www.touratech.de)

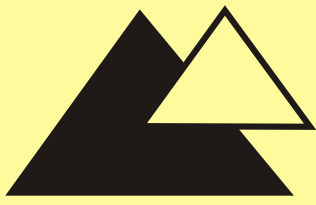

# TOURATECH

TOURING RALLYE RACING TECHNOLOGY

01-370-0170-0

## Installation Instructions Lift Handle KTM LC8

### Contains:

- 1 x Lift handle
- 2 x Screw counter sunk M8x30
- 4 x Washer M8



### Installation:

Remove the passenger foot peg mount on the left side. It will be reattached with the lift handle as shown on the photo with M8x30 screws. The lift handle is installed under the rear foot peg mount. Install four washers between the grip and the motorcycle frame. The grip can otherwise interfere with the rear shock